VH504901

OLYMPUS

Quick Start Guide FE-115/X-715

Start Here

For more information, please refer to the Basic & Advanced Manual or visit www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

BEFORE YOU BEGIN

Gather these items (box contents)
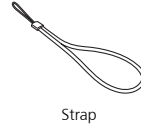
This box also contains: Advanced Manual (CD-ROM), Basic Manual, Warranty card. Contents may vary depending on purchase location.

1 GETTING STARTED

a. Attach the strap
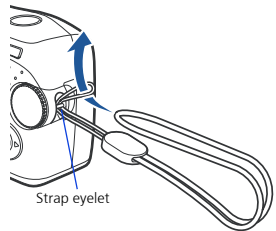
Pull the strap tight so that it does not come loose.

b. Insert the batteries
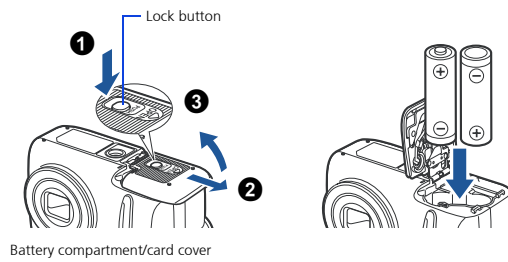
c. Set the date and time

① Turn the mode dial to **P-AUTO** and press the power switch to turn the camera on.

② Press (menu) to display the menu screen.

③ Press △/▽ to set an item. Press ◁/▷ to select the next field.

2 TAKE A PICTURE

a. Zoom

The cursor moves to the left or right according to the degree of zoom.
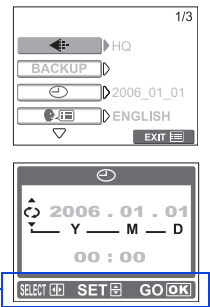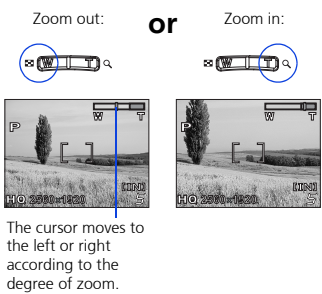
b. Focus

① Using the monitor, place the AF target mark over your subject.
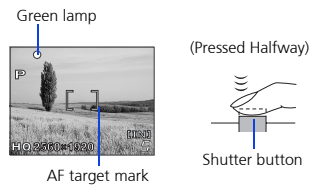
② Press and hold the shutter button halfway to lock focus.

- The green lamp indicates focus is locked.

c. Take the picture

Press the shutter button completely to take the picture.
(Press Completely.)
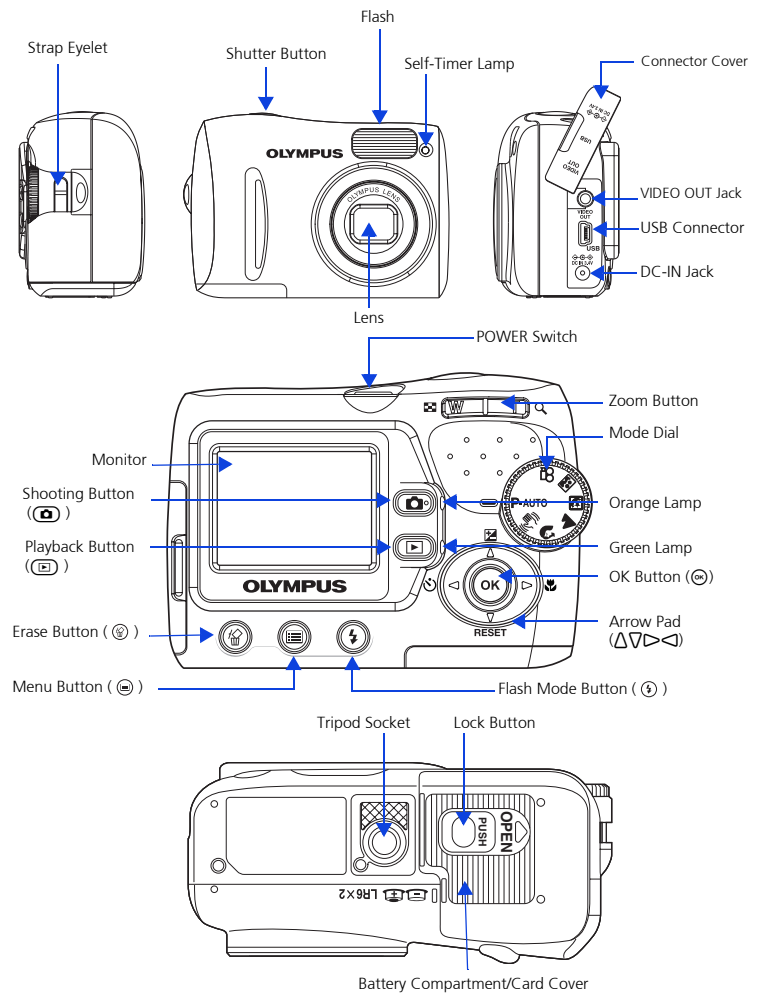
3 REVIEW OR ERASE A PICTURE

a. Press (playback)

- The last picture taken will be displayed.
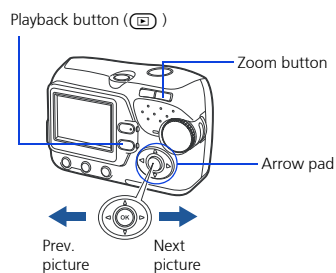
b. Take a closer look

- Press T (Q) to enlarge the image.
- Press W (▦) to return to normal.
- Press △/▽ or ◁/▷ to scroll around.

Press (camera) to return to shooting mode.

c. To erase a picture

① Display the picture you want to erase.

② Press (erase).
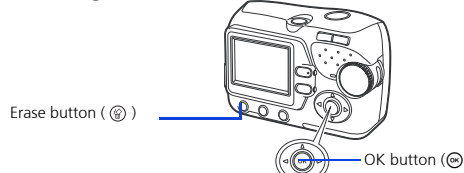
③ Select [YES], and press OK.

- The picture is permanently erased.

CAMERA DIAGRAM

4 TRANSFER IMAGES

a. Install the software

① Insert the OLYMPUS Master CD-ROM.

② **Windows:** Click the "OLYMPUS Master" button.
Macintosh: Double-click the "Installer" icon.

③ Simply follow the on-screen instructions.

Remember to register your camera when you install OLYMPUS Master or by visiting: www.olympusamerica.com/prodreg

b. Connect the camera to the computer

① Connect the camera and computer using the USB cable (included).

- The monitor will turn on automatically
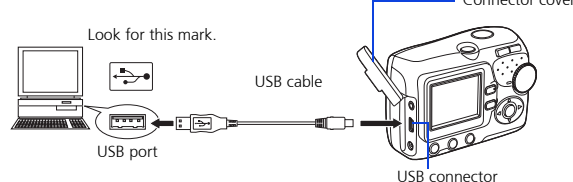
② Select [PC] on the monitor, and press OK.
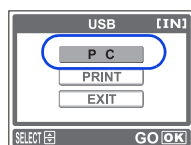
- Your PC will now recognize your camera as a removable storage drive.

c. Transfer images to the computer

① With the camera now connected, open OLYMPUS Master.
The [Transfer Images] window is displayed.

② Select the images you want to transfer, and click the [Transfer Images] button.
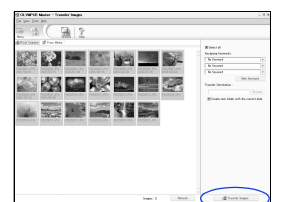
If the [Transfer Images] window is not displayed automatically:

a. Click the "Transfer Images" icon on the OLYMPUS Master main menu.

b. Click the "From Camera" icon.

Printed in China

OLYMPUS®

Guia de iniciação rápida FE-115/X-715

Começar aqui

Para maiores informações, consulte os Manuais Básico e Avançado ou visite a página web www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

ANTES DE COMEÇAR

Reúna estes itens (conteúdo da caixa)
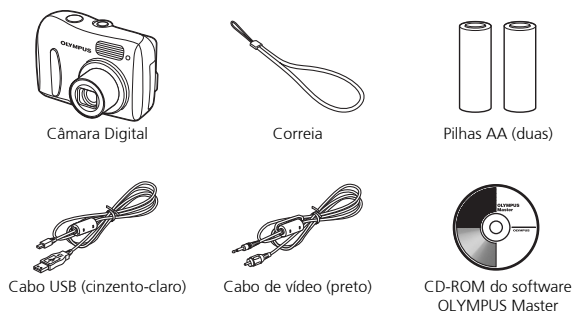
Esta embalagem também contém: Manual Avançado (CD-ROM), Manual Básico, Cartão de Garantia. O conteúdo pode variar conforme o local de aquisição.

1 INICIAÇÃO

a. Colocar a correia

Puxar bem a correia de modo a que não fique solta.
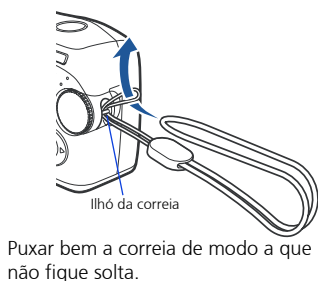
b. Inserir as pilhas
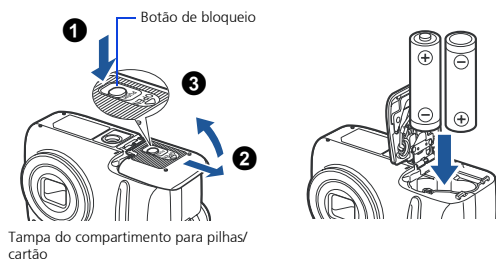
c. Definir a data e hora

① Rode o selector de modo para P-AUTO e prima o botão de ligação para ligar a câmara.

② Premir (menu) para visualizar o ecrã do menu.

③ Premir △/▽ para definir um item. Premir ◁/▷ para seleccionar o campo seguinte.

2 FOTOGRAFAR

a. Zoom

O cursor move-se para a esquerda ou para a direita de acordo com o grau do zoom.
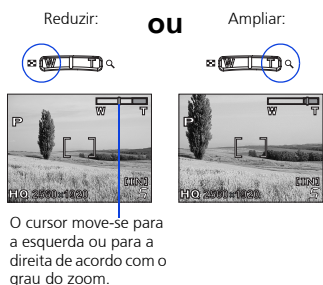
b. Focar

① Utilizando o ecrã, colocar a marca AF sobre o tema fotográfico

② Premir o disparador até metade e manter nessa posição para bloquear a focagem.
- A luz verde indica que a focagem está bloqueada.

c. Fotografar

Premir totalmente o disparador para fotografar. (Totalmente premido)

Disparador
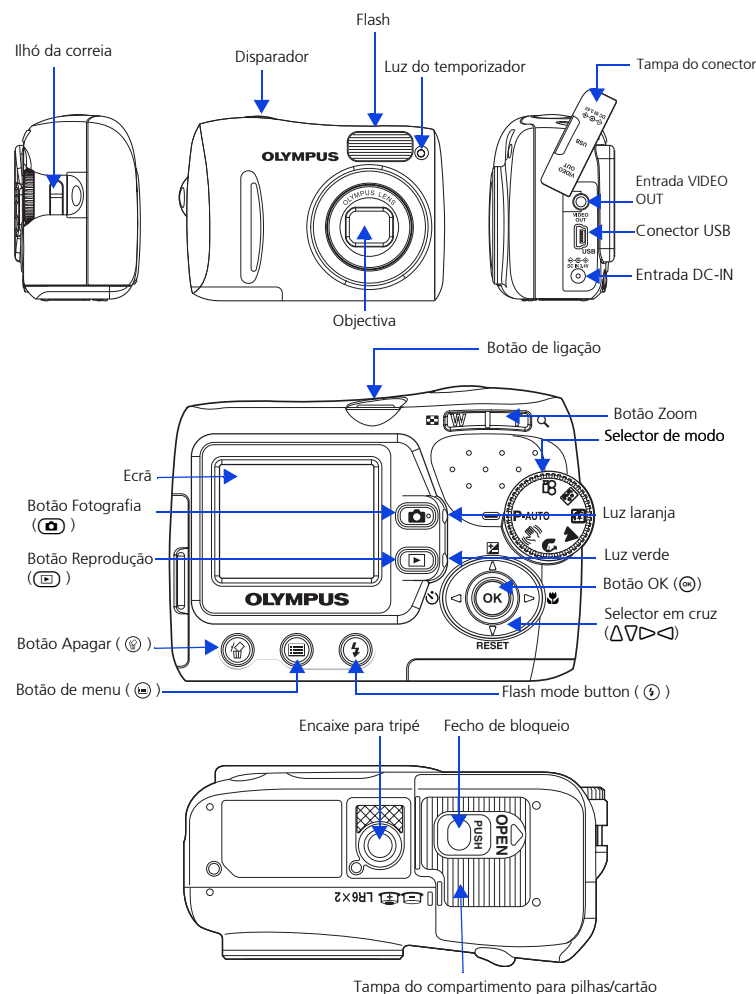
3 REVER OU APAGAR UMA FOTOGRAFIA

a. Premir (▶)

- A última imagem fotografada será visualizada.
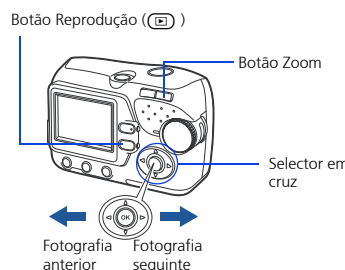
b. Ver mais de perto

- Prima T (🔍) para ampliar a fotografia.
- Prima W (⊞) para voltar ao normal.
- Premir △/▽ ou ◁/▷ para percorrer a imagem.

Premir (📷) para voltar ao modo fotografia.

c. Para apagar uma fotografia

① Visualizar a fotografia que pretende apagar.

② Premir (🗑).

③ Seleccionar [SIM] e premir (OK).
- A fotografia é eliminada permanentemente.

DIAGRAMA DA CÂMARA
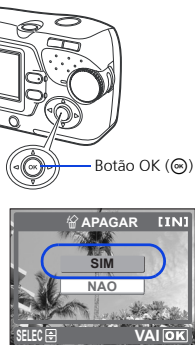
4 TRANSFIRA IMAGENS

a. Instalar o software

① Inserir o CD-ROM OLYMPUS Master.

② **Windows:** Fazer clique no botão "OLYMPUS Master".
Macintosh: Fazer duplo clique no ícone "Installer".

③ Seguir simplesmente as instruções no ecrã.

Lembre-se de registar sua câmara quando instalar OLYMPUS Master ou visitando: www.olympusamerica.com/prodreg

b. Ligar a câmara ao computador

① Ligar a câmara ao computador usando o cabo USB (incluído).
- O ecrã ligar-se-á automaticamente.

② Seleccionar [PC] no ecrã e premir (OK).

- O PC reconhece agora a câmara como um disco amovível.
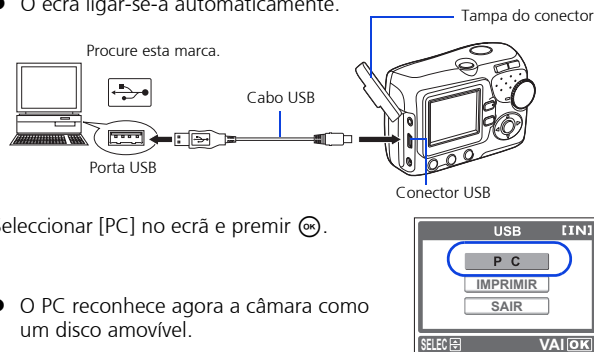
c. Transferir imagens para o computador

① Com a câmara ligada, abrir o OLYMPUS Master.
Surge a janela [Transfer Images] (Transferir imagens).

② Seleccionar as imagens que pretende transferir e fazer clique no botão [Transfer Images] (Transferir imagens).
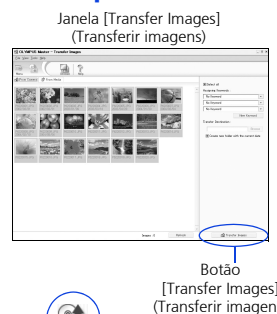
Se a janela [Transfer Images] (Transferir imagens) não surgir automaticamente:

a. Fazer clique no ícone "Transfer Images" (Transferir imagens) no menu principal do OLYMPUS Master.

b. Fazer clique no ícone "From Camera" (Da câmara).

Printed in China